sankosha®
PRESS AND PROGRESS

Single Collar Cuff Press

Spare Parts List

LP-690E-V2 (REV : 8)

2012. 04 8-1

LP-690E-V2 (Front Diagram) REV:8

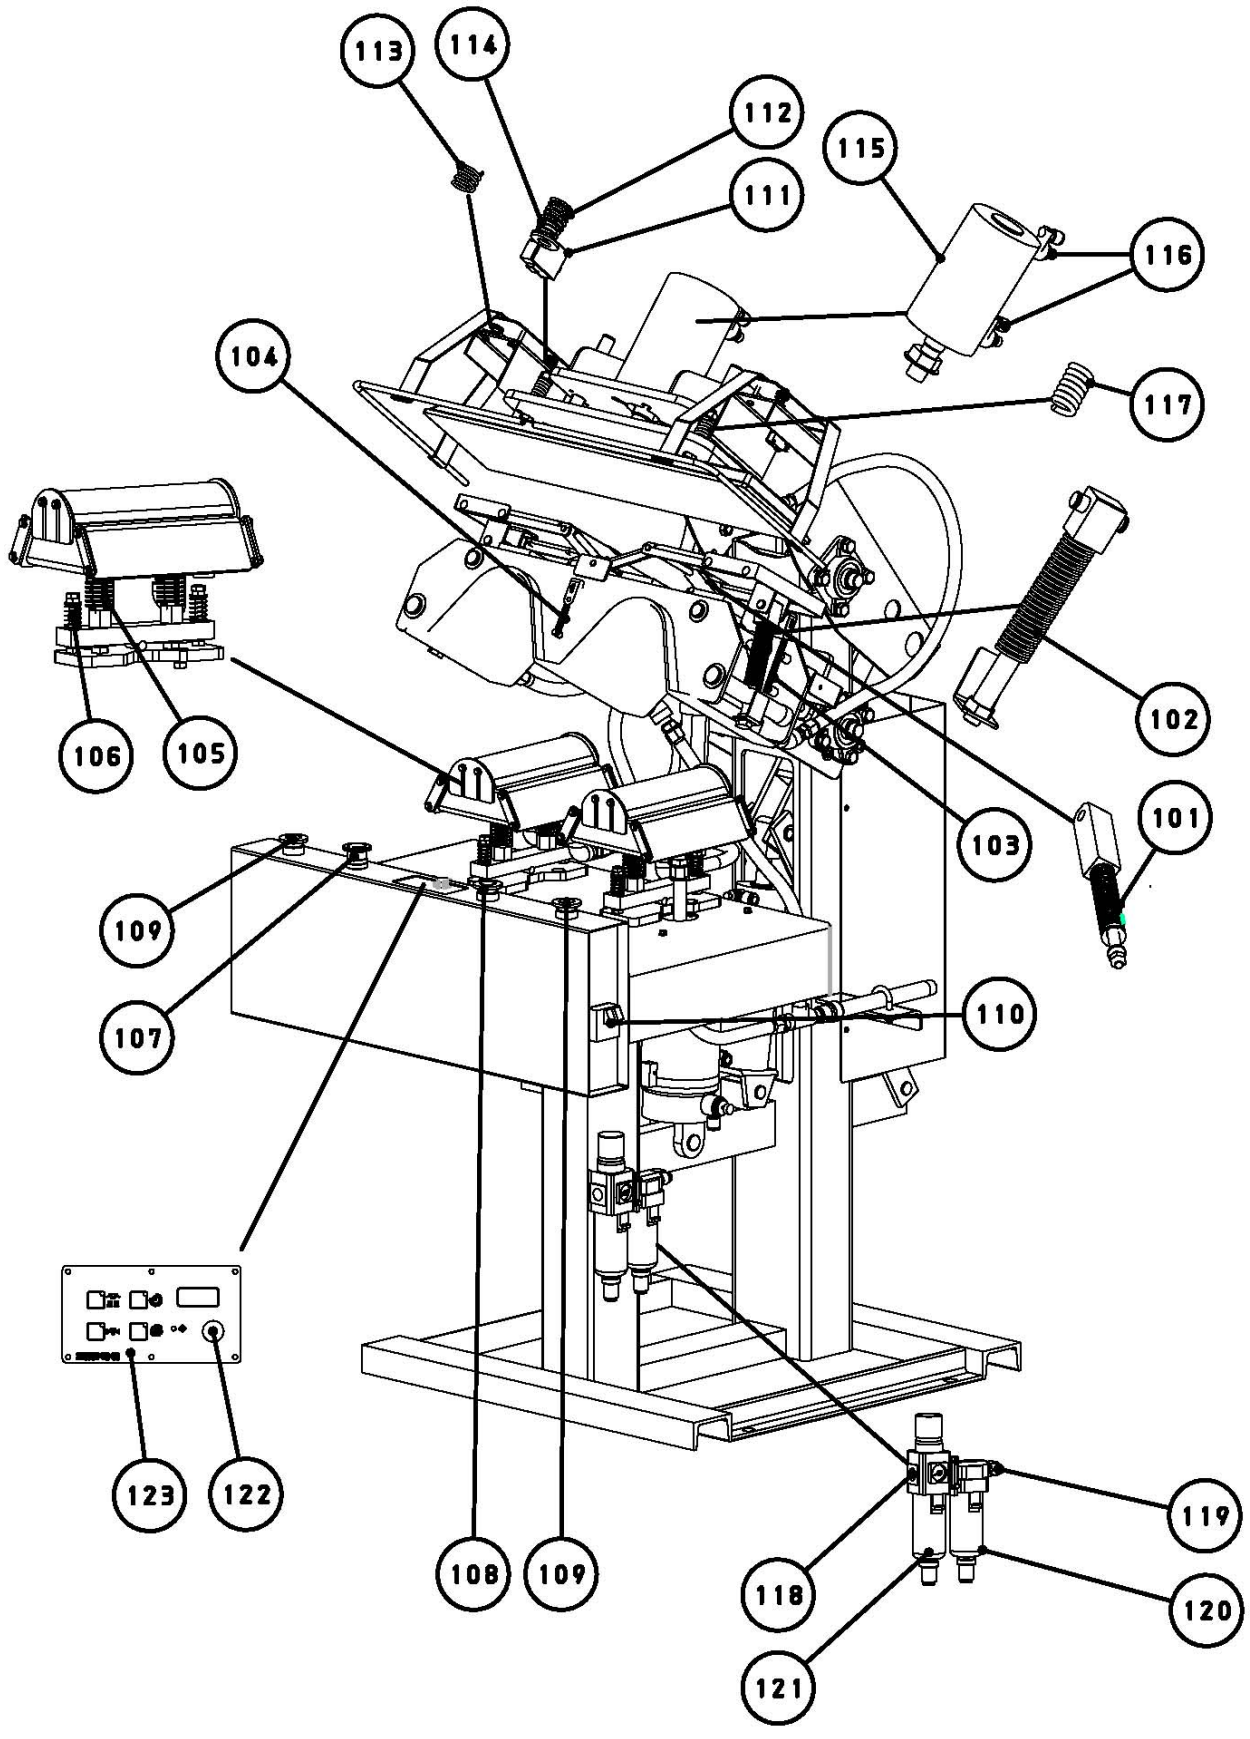

Front Diagram REV:8

No.	Part Name	Part Number	Q'ty	Remarks
101	Coil spring	H0E007	2	
102	Coil spring	H0E041	2	
103	Spring	H0F006	2	
104	Spring	H0F001	2	
105	Coil spring	H0E004	4	
106	Coil spring	H0E046	4	
107	Push button switch	21I107	1	EMG SW(Red)
108	Push button switch	21I111	1	Reset(Blue)
	Push button cap	21I044	1	
109	Push button switch	21I110	2	Right/left start(Green)
	Push button cap	21I042	2	
110	Breaker	21C004	1	
111	Push button switch	21I012	2	Right/left safety bar : No. ～YE080115V2
		21I085	2	No. YE080116V2～
112	Push button cap	21I013	2	No. ～YE080115V2
113	Spring	H0D001	2	
114	Spring	H0D002	2	
115	Cylinder	B0W007	1	Upper press
	Cylinder packing set	B6H045	1	
116	Speed controller	C1A030	2	
117	Spring	H0D017	4	
118	Combination	D0F001	1	
119	Joint	C0C025	1	
120	Element assembly	D1G002	1	
	Case assembly	D1J002	1	
121	Filter element	D1F002	1	
	Diaphragm assembly	D1H004	1	
	Case assembly	D1J002	1	
122	Volume	21D006	1	
123	Panel sheet	20U067	1	XE080035～

LP-690E-V2 (Rear Diagram) REV:8

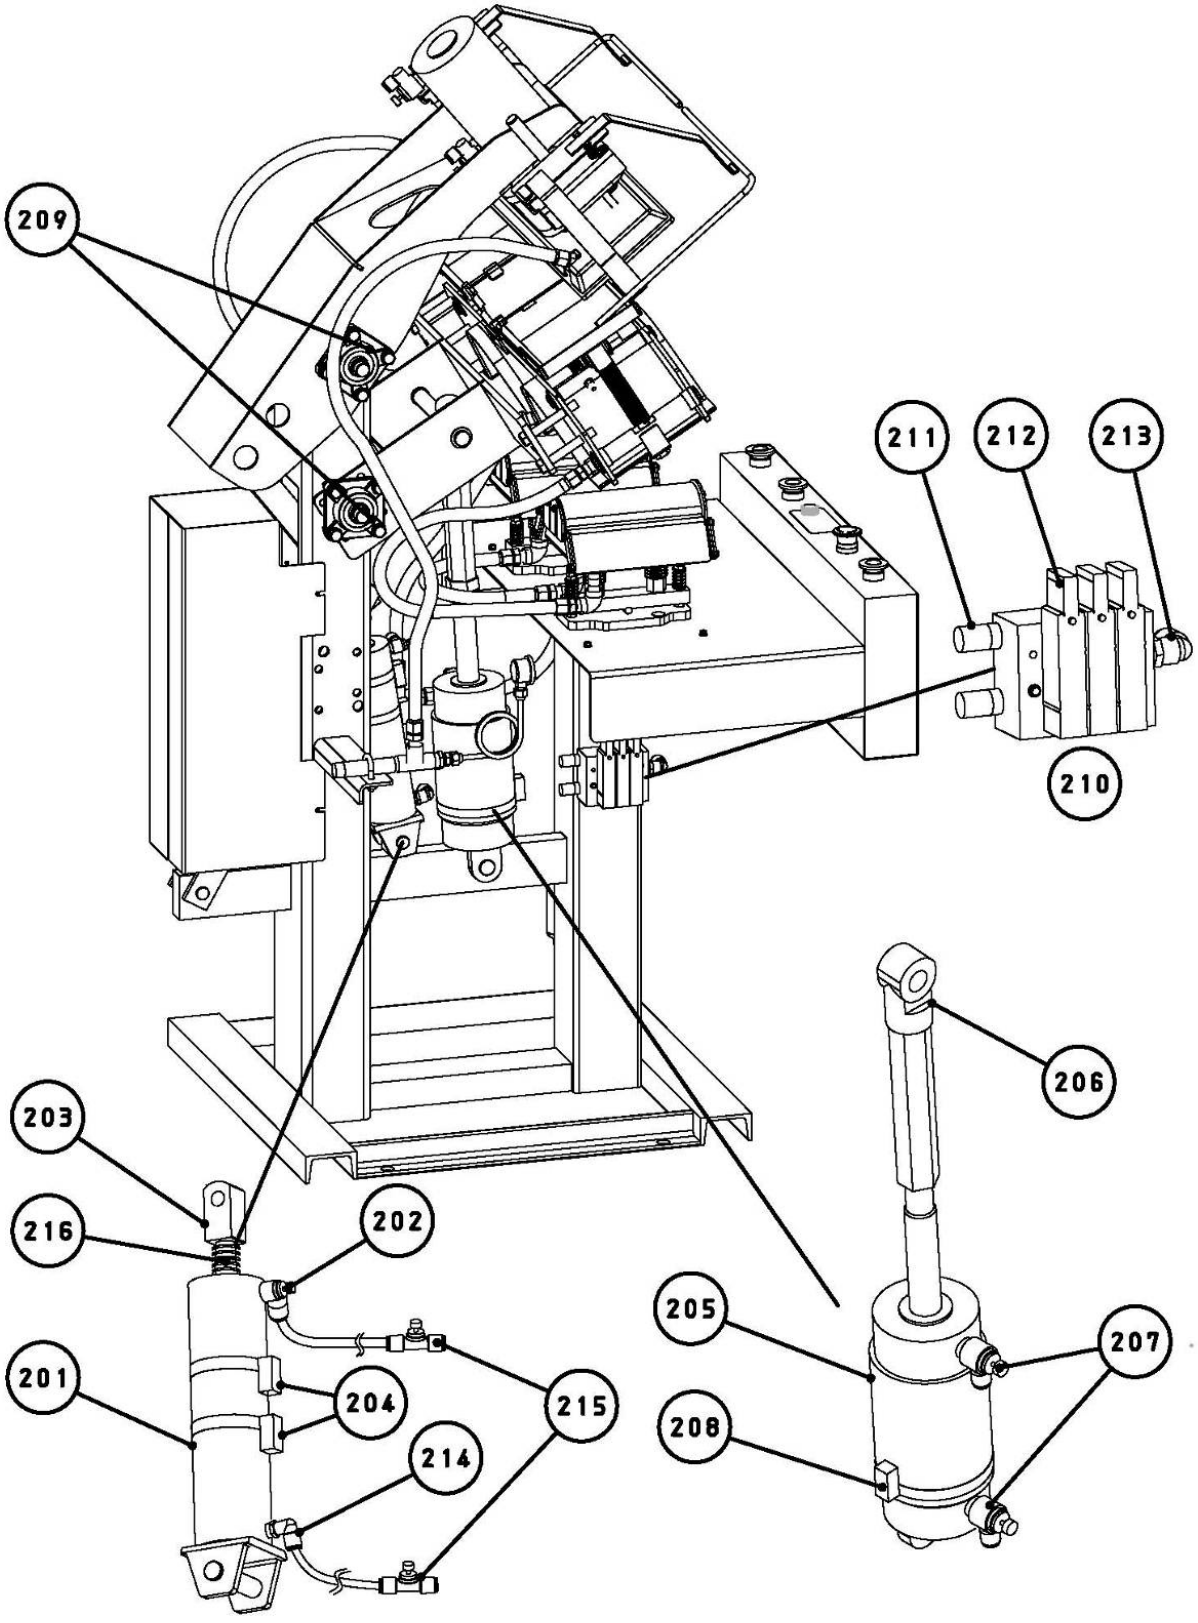

Rear Diagram REV:8

No.	Part Name	Part Number	Q'ty	Remarks
201	Cylinder	B0W013	1	Upper press arm
	Cylinder packing set	B6H044	1	
202	Speed controller	C1A023	1	
203	Knuckle joint	B6A005	1	
204	Cylinder sensor	B5A013	2	
	Sensor band	B5B006	2	
205	Cylinder	B0W014	1	Middle press arm
	Cylinder packing set	B6H045	1	
206	Knuckle joint	B6A006	1	
207	Speed controller	C1A028	2	
208	Cylinder sensor	B5A015	1	
	Sensor band	B5C002	1	
209	Bearing unit	E4A001	4	
210	Manifold valve	A0F079	1	
211	Silencer	C0A005	2	
212	Valve	A0E016	1	No.2:Close middle press arm
	Valve	A0E016	1	No.3:Close upper press
	Valve	A0E016	1	No.4:Close upper press
	Gasket	A0J018	3	
	Joint	A0J008	6	
213	Joint	C0C025	1	
214	Joint	C0C098	1	
215	Speed controller	C1A022	2	
216	Coil spring	H0E011	1	

LP-690E-V2 (Steam Piping) REV:8

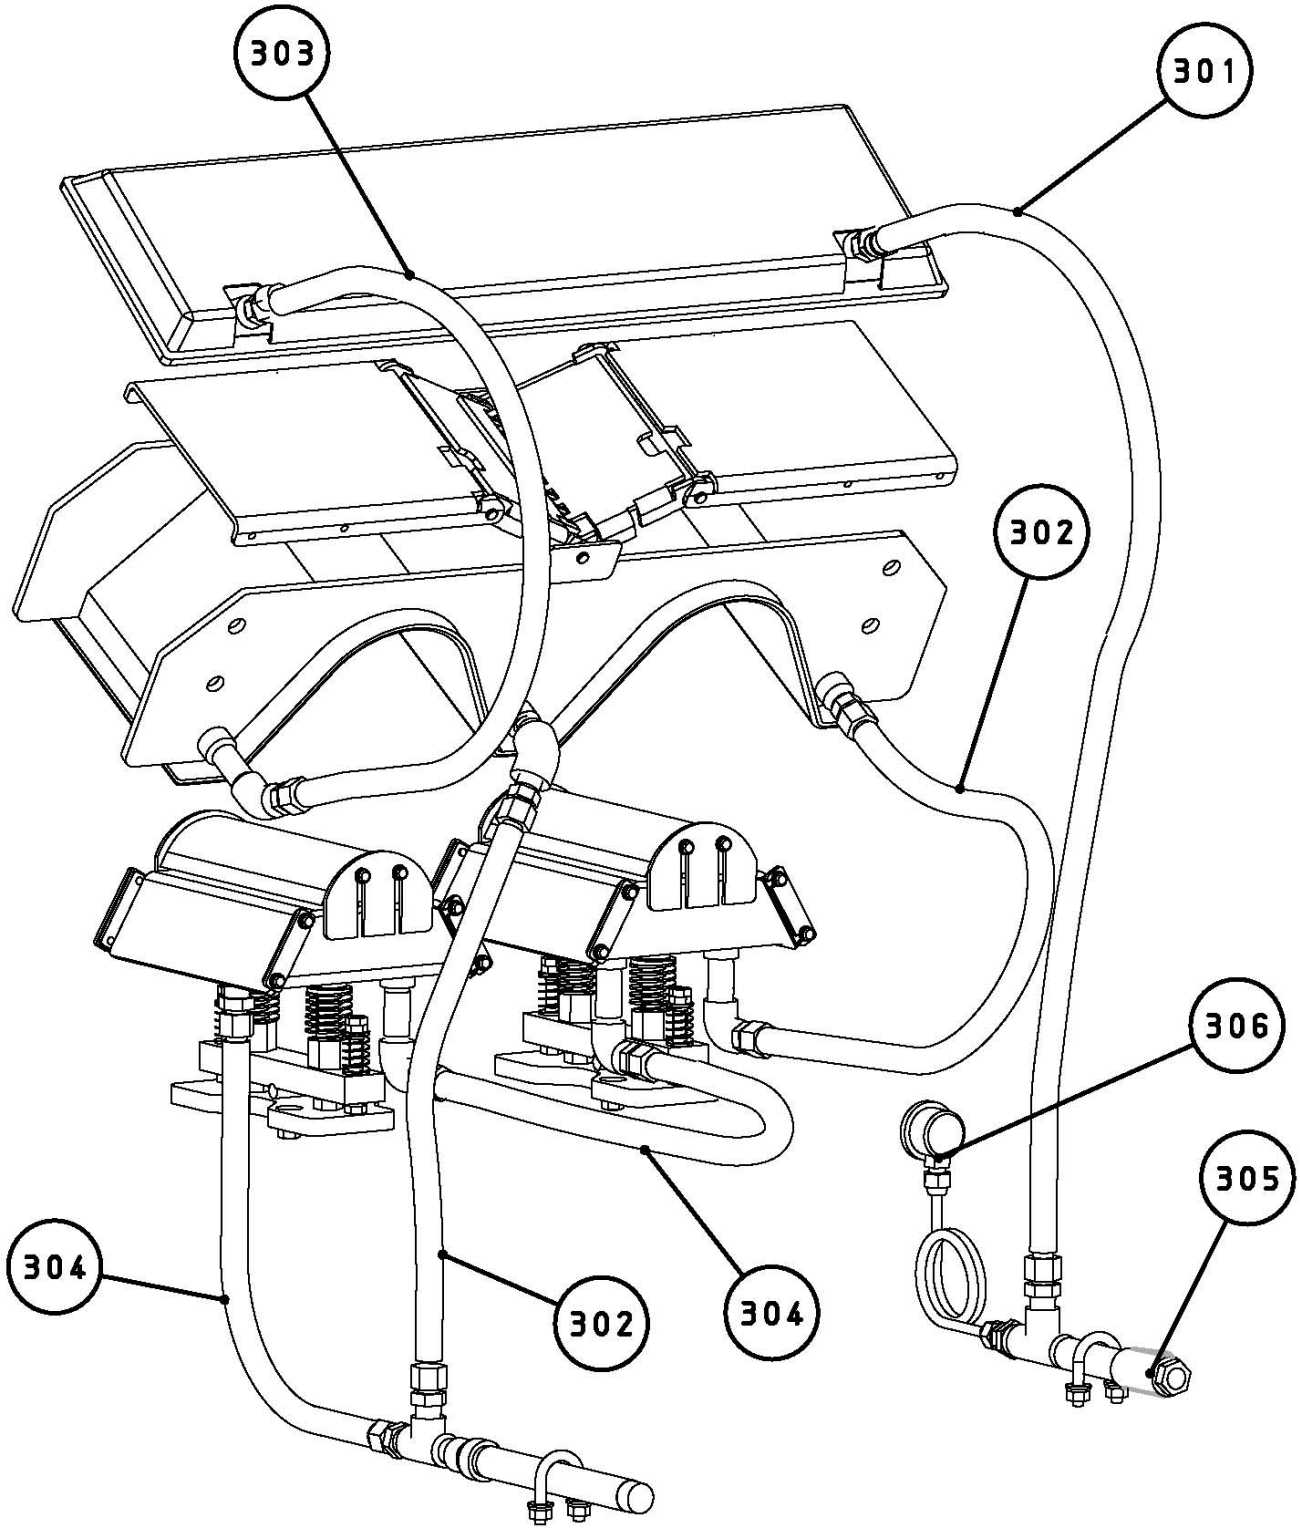

Steam Piping REV:8

No.	Part Name	Part Number	Q'ty	Remarks
301	Flexible hose	A6B004	1	～YE080084V2
		A6B020	1	YE080085V2～
302	Flexible hose	A6B001	2	～YE080084V2
		A6B016	2	YE080085V2～
303	Flexible hose	A6B007	1	～YE080084V2
		A6B019	1	YE080085V2～
304	Flexible hose	A6B009	2	～YE080084V2
		A6B015	2	YE080085V2～
305	Y type strainer	J2M002	1	
306	Pressure gauge	J0A003	1	

LP-690E-V2 (Cover Diagram) REV:8

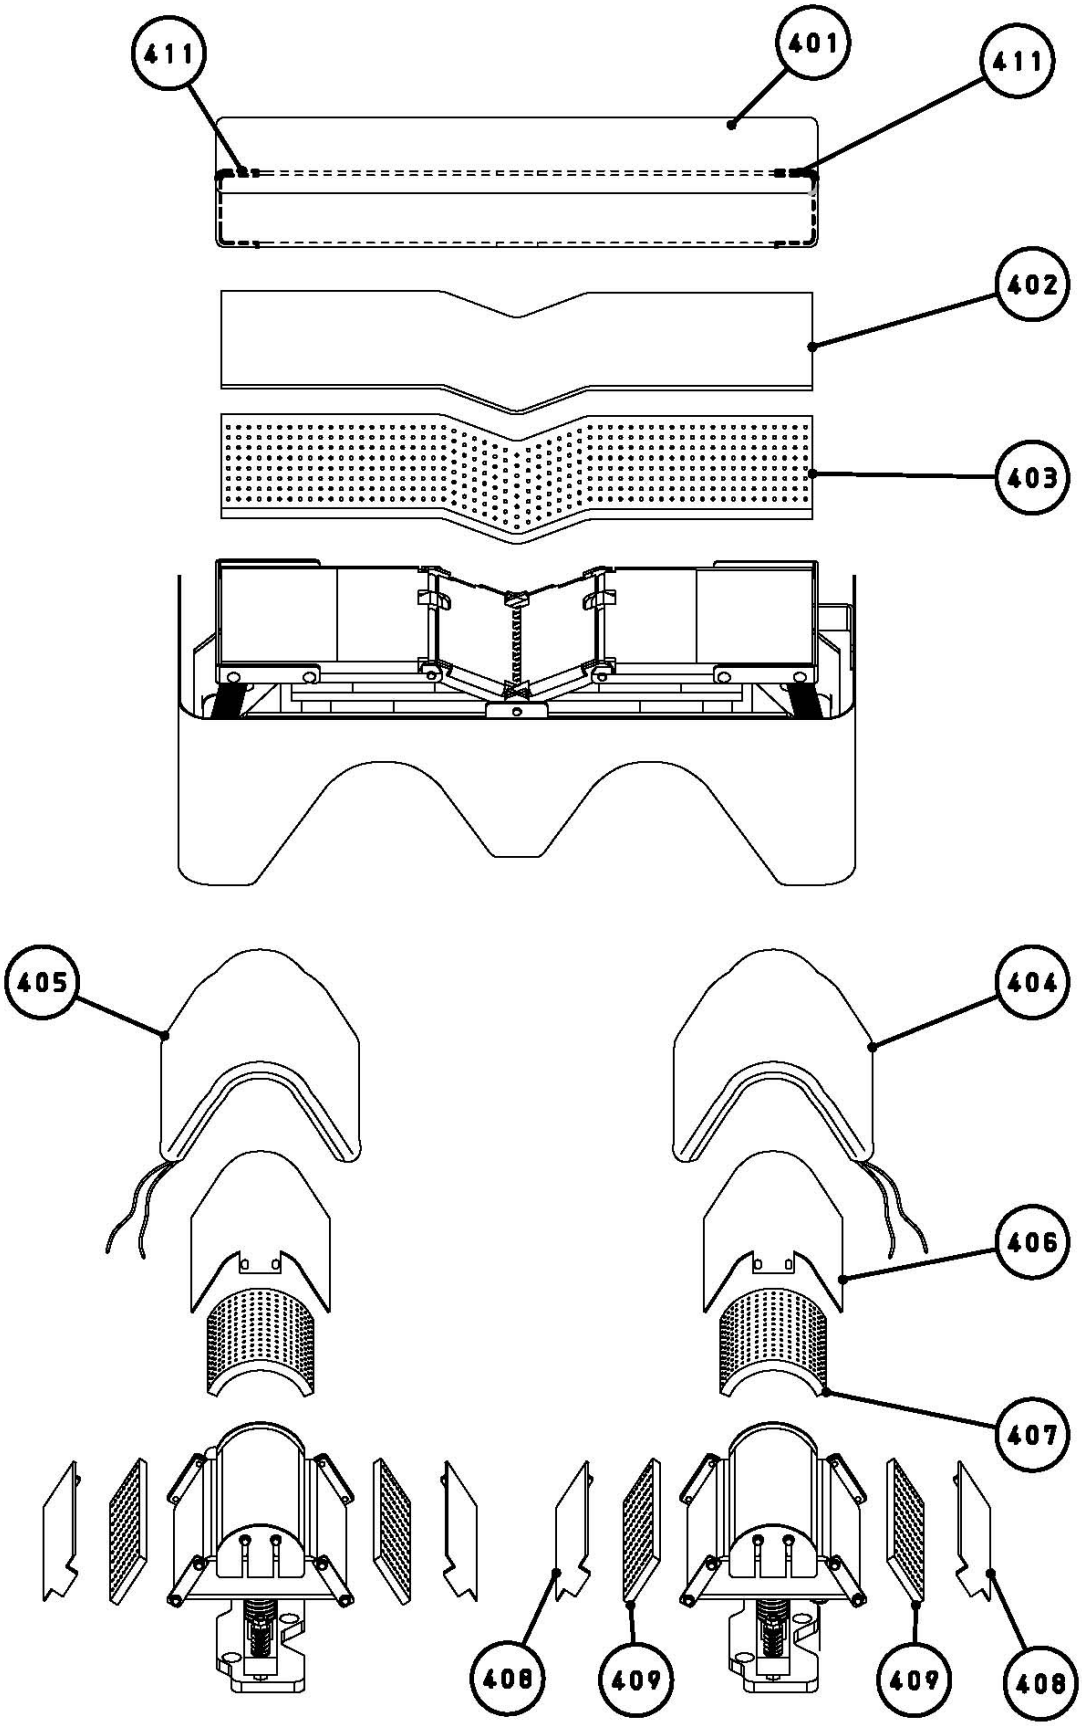

Cover Diagram REV:8

No.	Part Name	Part Number	Q'ty	Remarks
401	Collar Cover	S1C065	1	
402	Collar Spring Felt Pad 10mm	S1C066	1	YE080105V2～.Changeable
403	Collar Silicon Sponge	S1C067	1	
404	Cuff Cover(Right)	S1C074	1	
405	Cuff Cover(Left)	S1C075	1	
406	Cuff Double Felt Pad(Large)	S1C076	2	E080007V2～.Part Name Change
407	Cuff Silicon Sponge(Large)	S1C078	2	
408	Cuff Double Felt Pad(Small)	S1C077	4	E080007V2～.Changeable
409	Cuff Silicon Sponge30(Small)	S1C079	4	E080007V2～.Changeable
410	—	—	—	
411	Cover Extension Rod (long)	CN690-306	2	